

Command function	Cruise Control	Speed Limiter GC90(c)	Symbol	Action	LED
Switch on	Away briefly GC90(c) 2x low beep	Away long 1x low, 2x high beep			green
Activate	Up briefly				orange
Increase speed					
Stepwise 1 km/h	Up briefly				orange
Continuously (GC30, GC55)	Up long				
Stepwise 10 km/h GC90(c)	Up long				
Decrease speed					
Stepwise 1 km/h	Down briefly				orange
Continuously (GC30, GC55)	Down long				
Stepwise 10 km/h GC90(c)	Down long				
Resume last set speed	Down				orange
The preset speeds can be programmed in four steps	<ol style="list-style-type: none"> 1. Switch Goldcruise on 2. Drive desired speed 3. Activate Goldcruise 4. Press button 1,2 or 3 until beep is audible 				
Using preset speeds	Press 1, 2 of 3				orange
Stand-by	Pull briefly				green
Switch off	Away briefly				off

General directions

John Gold recommend that the GoldCruise remains off when not in use.

The resume function can be only used in case:

- The driving speed is over 40 km/h
- The ignition has not been switched off in the meantime
- For GC90(c) there has not been a mode change between cruisecontrol and limiter.

Cruise Control directions

The GoldCruisecontrol will disengage when:

- Depressing the brake pedal
- Depressing the clutch pedal (if connected)
- Operate the **||** or **ⓘ** function
- Speed reduction of 25% below the set speed
- Speed increase of 50% over the set speed
- Switching off the car ignition
- The brake fuse blows
- The brake lights burn out
- Do not activate the Goldcruise if the car is in neutral or the clutch pedal is depressed
- It is recommended not to use the Goldcruise in heavy traffic or during bad weather
A cruisecontrol does not apply the brakes! In case a drastical speed reduction is required, apply the brake pedal
- It is always possible to accelerate by foot while cruising. After releasing the pedal the car will resume to the previous set speed, unless the speed has been over 50% of the set speed

Speed Limiter directions

The GoldSpeedLimiter (GC90, GC90c) can be used in 4 different configurations (GC90, GC90c):

1. Fixed top speed (limit)
2. Voluntary / variable limit
3. Combination of fixed and voluntary limit
4. Acoustic warning

The voluntary speed limiter will disengage when:

- Operating the **||** function
- Switching **ⓘ** function
- Switching off the car ignition
- Releasing and quickly pressing the accelerator pedal

