


Meta System art. A3100485 bonnet switch of Fiat

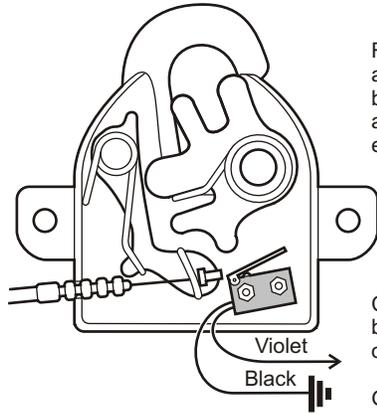

Remove bonnet lock assembly and fix bonnet switch using attached screws to existing holes

Connect violet wire to bonnet switch input of alarm system

Ground black wire