



Meta ActivePark Quick Installation Manual

Kit Contents

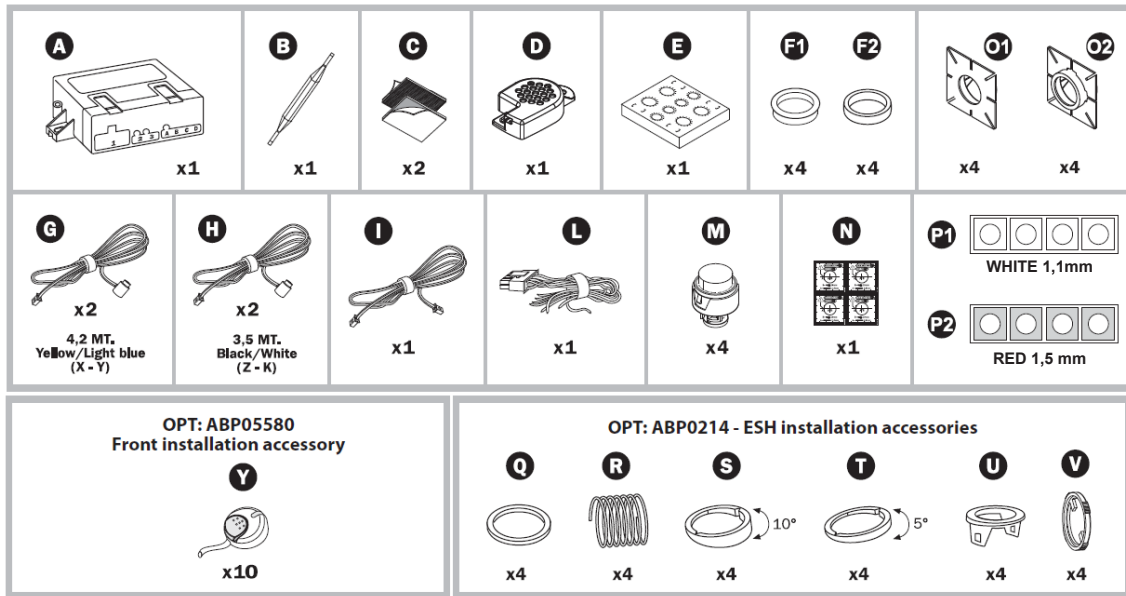

General Wiring Diagram

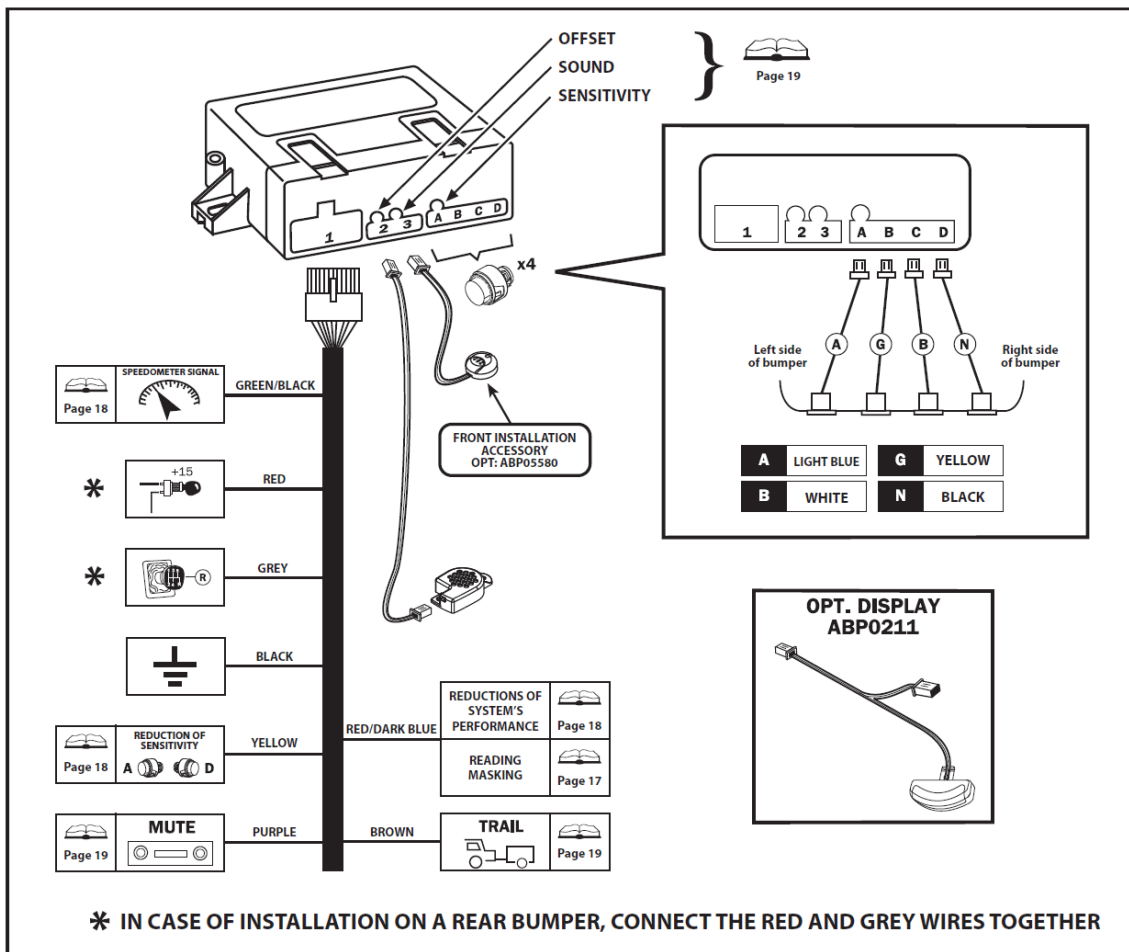

Installation

CHOOSE THE RIGHT BIADHESIVE FOR THE DIFFERENT THICKNESS OF THE BUMPERS

P1
WHITE
(1,1 mm)

P2
RED
(1,5 mm)

CHOOSE THE RIGHT BIADHESIVE FOR THE DIFFERENT THICKNESS OF THE BUMPERS

PRESS THE CONNECTOR UNTIL IT TOUCHES THE FIN

CONNECTOR

FIN

17 - 24
+
10 mm
+
17 mm
ABP 05770

ONLY PLASTIC BUMPERS

$\alpha = 0^\circ$

0° 90° 0° 90° 0°

NOTE: DEGREASE THOROUGHLY BEFORE APPLYING THE TWO-SIDE ADHESIVE TAPE

Calibration

SENSITIVITY

SENS. = BEEP...BEEP...BEEP...

TEST **ADJ.** **TEST** **ADJ.**

OFFSET

OFFSET = BEEEE...P

VOLUME

BEEP...BEEP...

BEEP...BEEP...